


THE LS2002 **Rated Capacity Indicator**

Program your Load Charts into the LS2002

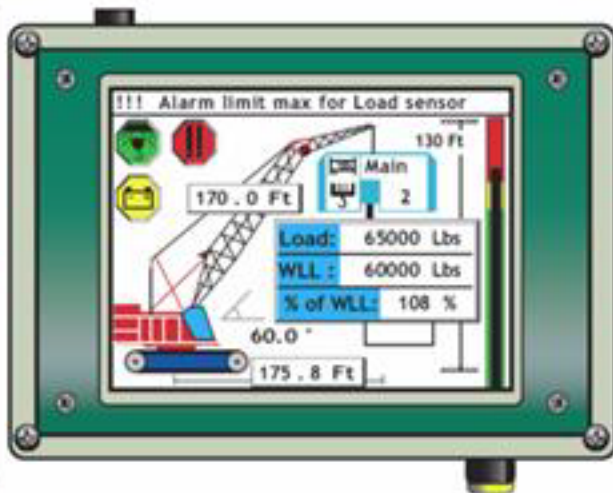

The LS2002 displays load on hook, working load limit, active hoist, boom angle/length, hook radius, parts of line, tip height, optional anti-two-block and optional wind speed from the color touch screen.


Stainless Steel Load Cell



- Eliminate the guess work of what the load your lifting actually weighs
- Temperature compensation of the load cell and angle sensor ensures consistent high level of accuracy
- Load cell will quickly install on the ball, block or boom tip dead end
- Exceptional display visibility in direct sunlight



Optional Wind Speed Sensor

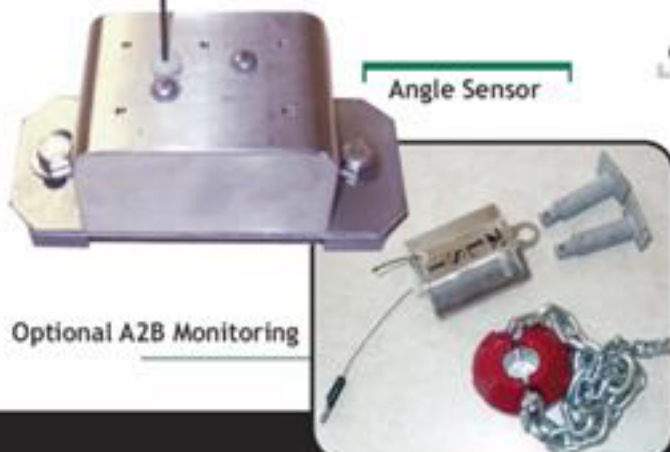

Angle Sensor

Optional A2B Monitoring

The LS2002 ships pre-calibrated and installs in less than 1/2 a day

Each boom sensor uses 3 "C" cell alkaline batteries. Replacement batteries cost less than \$5.00

www.craneloadindicator.com
Harry McCaskill
 Office: 251-645-6555
 Cell: 251-680-2051
 E-Mail: harrym@direcway.com



Distributed by Innovative Crane Technologies